

# SHOOTING MODES



These options may tell the camera how to set the shutter speed and aperture, adjust ISO, set your white balance, pop the built-in flash, or change other picture settings internal to the camera.

Perfect to print A5 size  
14cm x 21cm / 5.83" x 8.27"



## CAMERA MODES

AUTO

### Full automatic mode

The camera sets all of the settings automatically for a properly exposed and sharp image.

M

### Manual mode

The photographer sets the Shutter Speed, Aperture and ISO. The camera provides a meter reading.

S / Tv

### Shutter priority mode

The photographer sets the Shutter Speed and the camera sets the proper Aperture. The ISO is set separately. Exposure is adjusted through the exposure compensation setting.

A / Av

### Aperture priority mode

The photographer sets the Aperture and the camera sets the proper Shutter Speed. The ISO is set separately. Exposure is adjusted through the exposure compensation setting.

P

### Program mode

The camera pairs up an Aperture and Shutter Speed combination. The ISO is set separately. Exposure is adjusted through the exposure compensation setting.



### Macro / close-up mode

The camera sets the ISO, shutter speed, and aperture to assist in macro photography.



### Landscape mode

The camera sets the ISO, shutter speed, and aperture to assist in landscape photography. The built-in flash is turned off.



### Night portrait mode

The camera combines the built-in flash and a slow shutter speed.



### Portrait mode

The camera sets a wide / large Aperture to blur the background. Overrides other settings.



### Sports mode

The camera sets a fast Shutter Speed to freeze action.